


Mounting Guide for Desk Screen / Modesty Panel Brackets

Surface Mount Brackets

2 People required to mount the screen under-desk

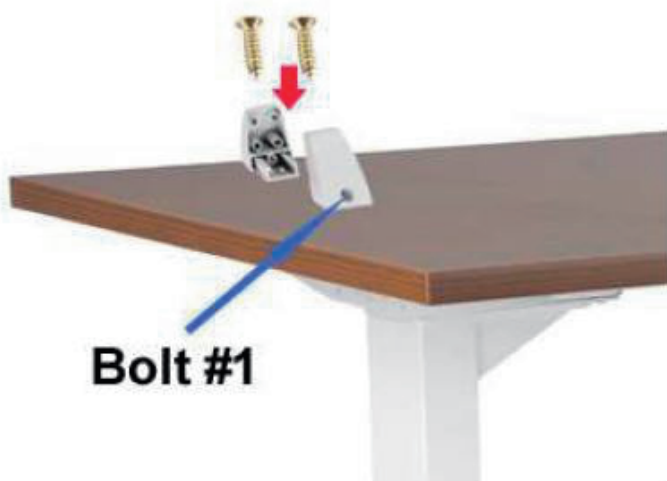

1. Position the brackets on/under where you want the screen to be mounted, then undo "Bolt #1" shown above.
2. Fix half the brackets to the desk top (on or under) with the included self-taping screws, then reattach the other half with "Bolt #1".
3. Insert the privacy screen into the mounting brackets.
4. Tighten the "Bolt #1" to firmly grip the screen.

Edge Mount Brackets

For desktops with thickness of 25mm or less, only



1. Push the two brackets over the edge where the screen is to be mounted, as shown above
2. Tighten both brackets from underneath with the supplied bolts.
3. Insert the privacy screen into the mounting brackets, loosen "Bolt #1" (shown above) if necessary.
4. Tighten the "Bolt #1" to firmly grip the screen.

From March 2020 onwards:

2 bolts will be supplied as standard to the kit, offering the following fixation options:

- M6x25mm bolt - for 12 to 16mm thick panels
- M6x20mm bolt - for 7 to 11mm thick panels