


## (A) - WALL PLUG

2 PCS. FOR EACH EXTRUSION

DRILL THE CEILING AND INSERT THEM INSIDE

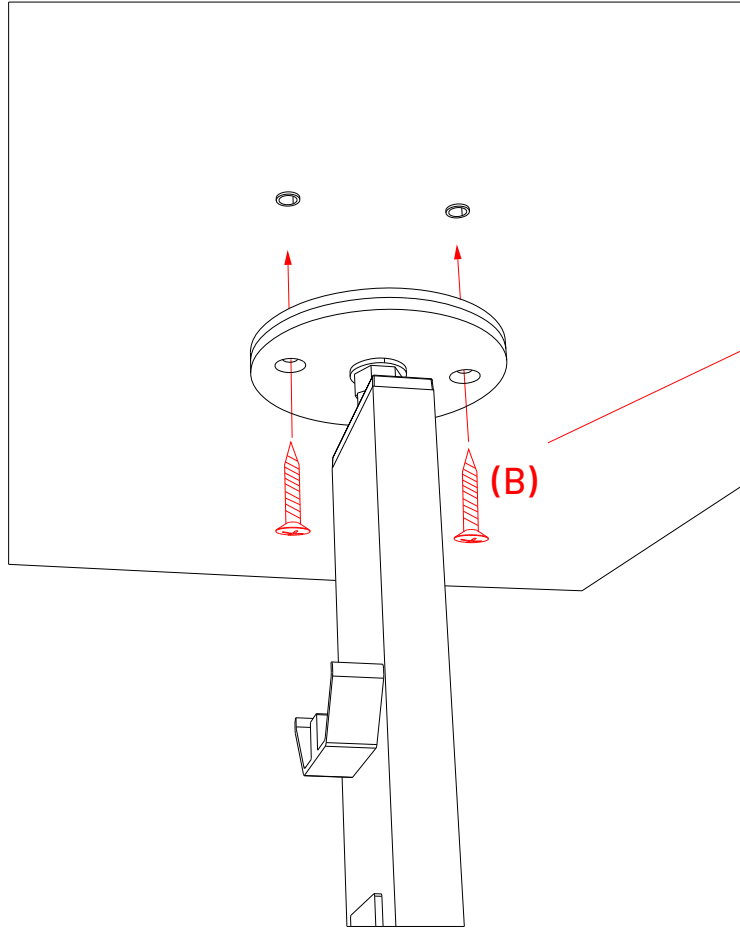

## **(B) - SELF TAPPING SCREW**


2 PCS. FOR EACH EXTRUSION


PASS THEM INSIDE THE HOLE AND SCREW INTO THE WALL PLUG

## (C) - METRIC SCREW

2 PCS. FOR EACH HORIZONTAL BAR

MUST PASS INSIDE THE HOLE AND SCREW INTO THE WALL PLUG

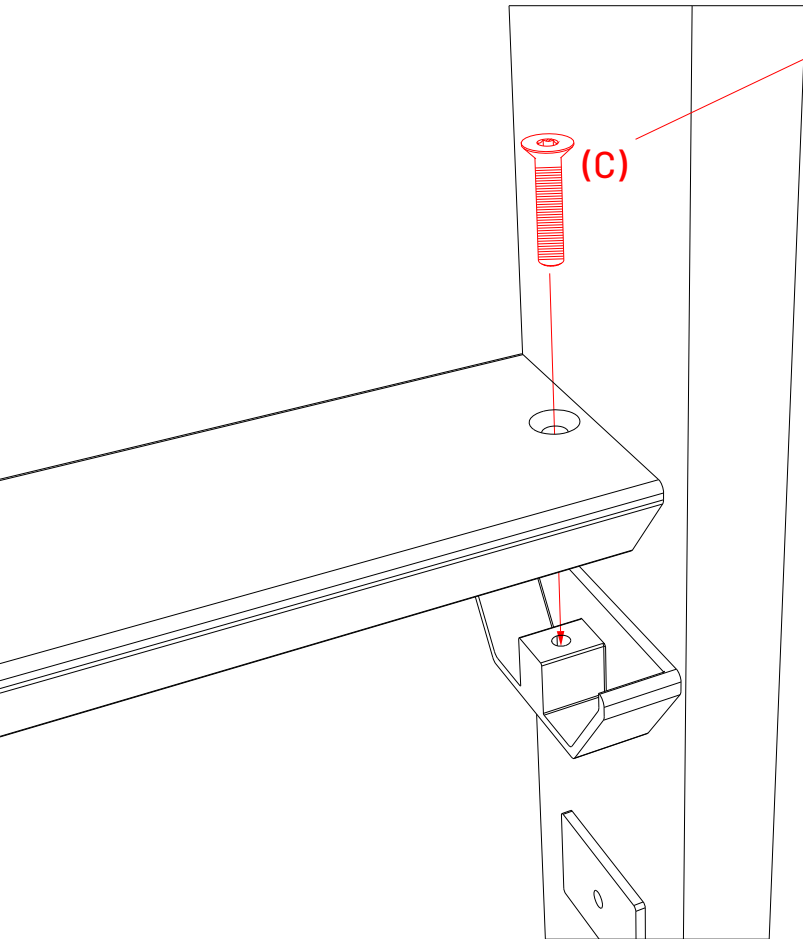

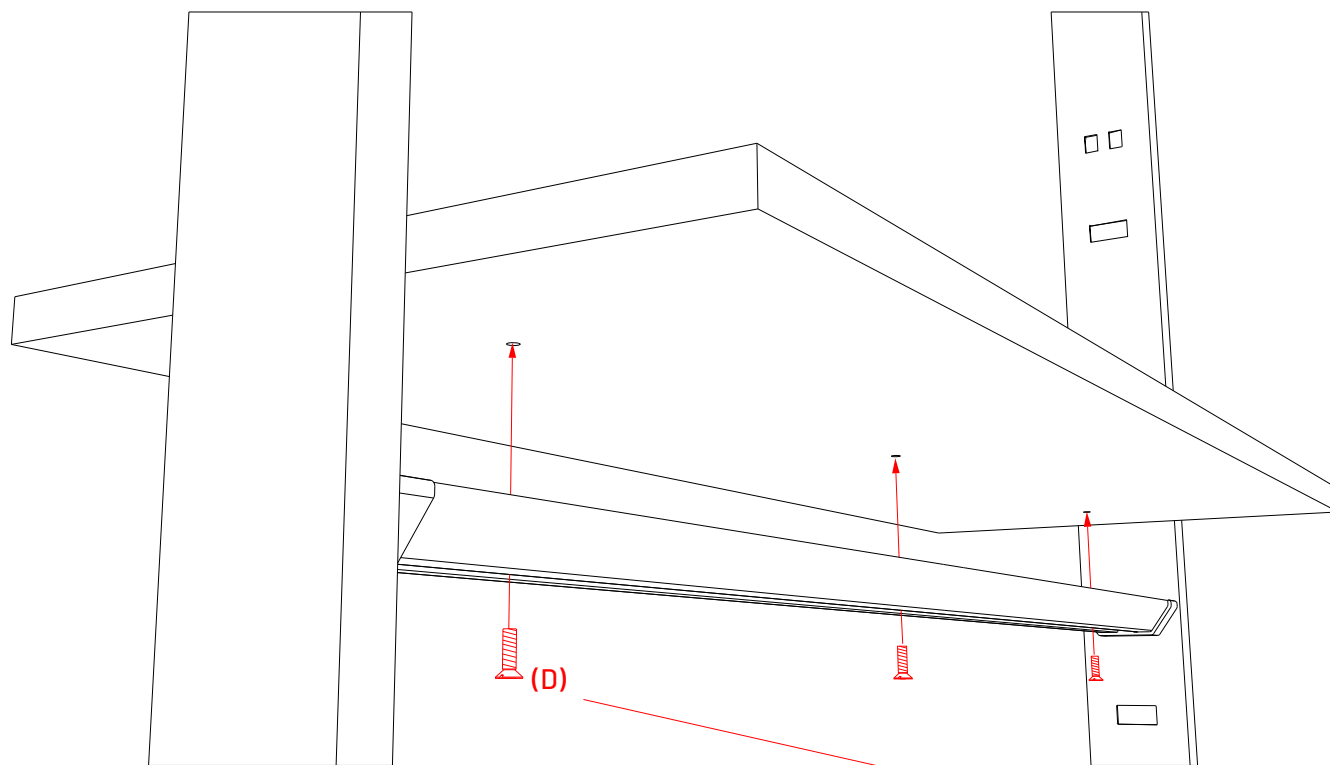

## **(D) - WOOD SCREW**

**3 PCS. FOR EACH SHELF**

**SCREW THE SHELF TO THE BAR BY  
SCREWING IT FROM BELOW**