











ASSEMBLY INSTRUCTIONS VULCANO TABLE

.0504.xx mm 1600x800






CODICE ATIM: 411/78. .0505.xx mm 1600x900


.0506.xx mm 1900x900

Accessories bag contents:

| | | |
|---|---|-------------------|
|  | 32 x Galvanized TCCE M6 x 85 screw | cod. 2.6510951.02 |
|  | 32 x Galvanized washer mm 12 x 2 hole 6.3 | cod. 2.653041.02 |
|  | 24 x Nickel-plated TPS M6 x 16 CE screw | cod. 2.652941.06 |
|  | 8 x TCCE zinc-plated screw M8 x 15 ISO 4762 | cod. 2.652931.02 |
|  | 8 x Washer mm 16x1.5 hole 8.5 zinc. | cod. 2.650141.02 |
|  | 8 x Leg cap 60x60 | cod. 2.207085.xx |
|  | 4 x White adhesive felt pad 35 x 35 x 3 | cod. 2.653467.01 |
|  | 4 x Bumper D. 12x12.8 PF3 T. flat | cod. 2.553077.13 |
|  | 1 x Galvanized hex key n° 4 | cod. 2.553061.02 |
|  | 1 x Galvanized hex key n° 5 | cod. 2.5512481.02 |

Box Content:
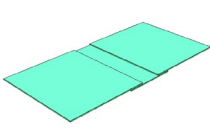
| | | |
|---|------------------------------------|---|
|  | 4 x Leg mm 714 P.A014 | cod. 3.2016165.xx |
|  | 8 x Joint mm 75 P. AA0079 gr. | cod. 3.2015965.01 |
|  | 2 x Beam mm 676 P.A014 | mm 1600x800: cod. 3.2016155.xx mm 1600x900 e mm 1900x900: cod. 3.2016285.xx mm 1600x800 e mm 1600x 900: cod. 3.2016145.xx mm 1900x900: cod. 3.2016765.xx |
|  | 2 x Current + mounted guide | mm 1600x800: cod. 2.9116173.xx mm 1600x900: cod. 2.9116183.xx mm 1900x900: cod. 2.9116193.xx |
|  | 1 x Set of 2 glasses + 1 extension | |

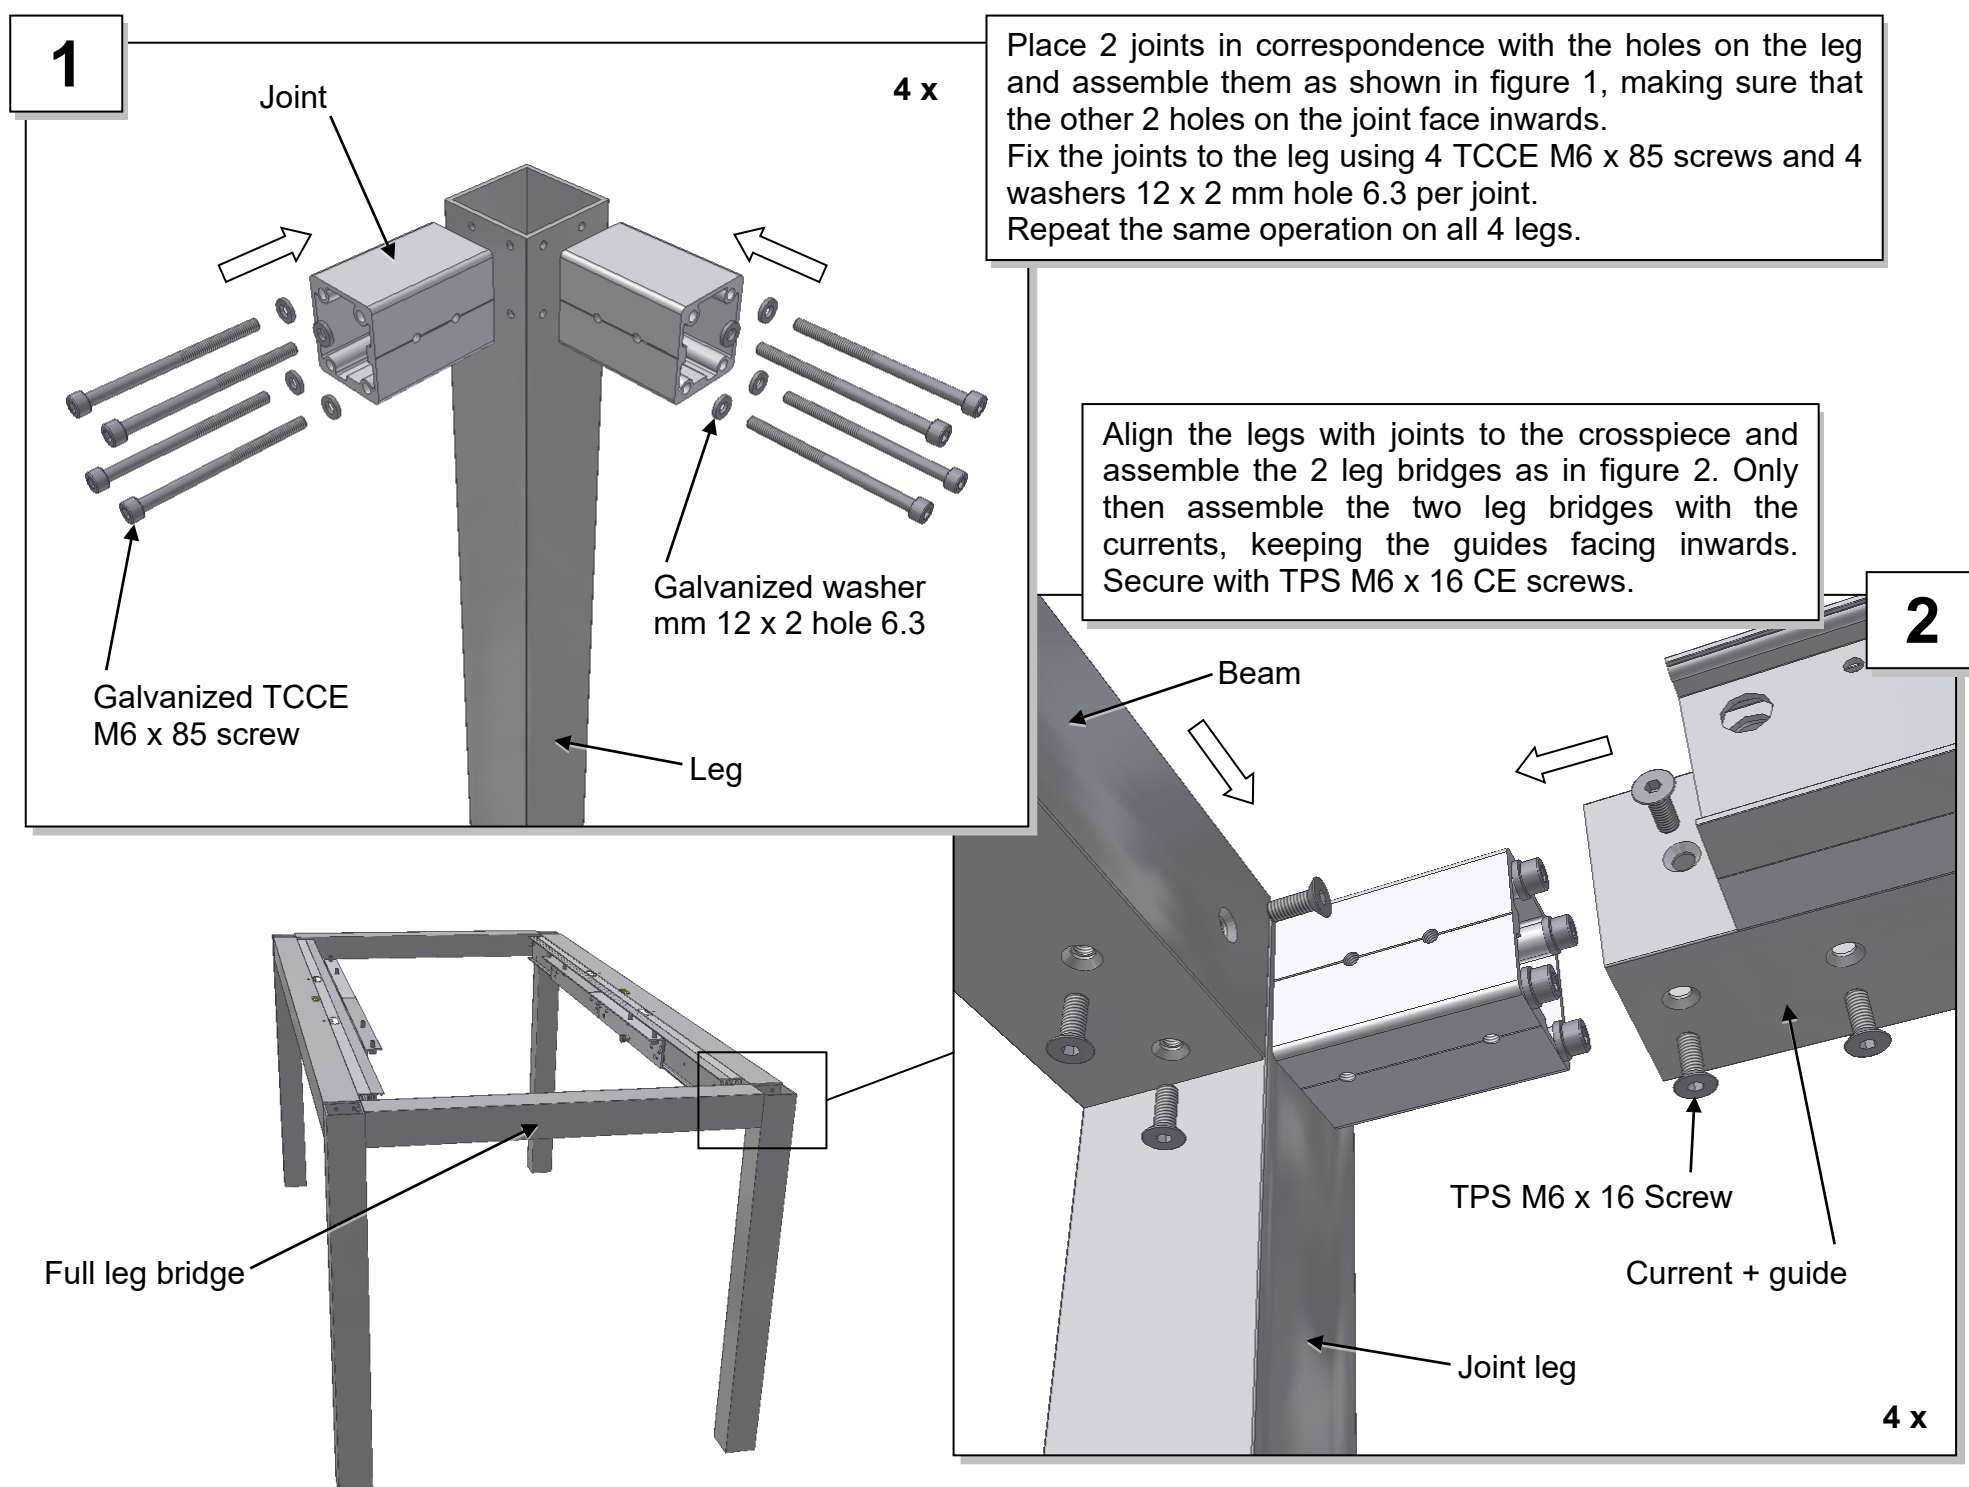


ASSEMBLY INSTRUCTIONS VULCANO TABLE


.0504.xx mm 1600x800

CODICE ATIM: 411/78. .0505.xx mm 1600x900



.0506.xx mm 1900x900

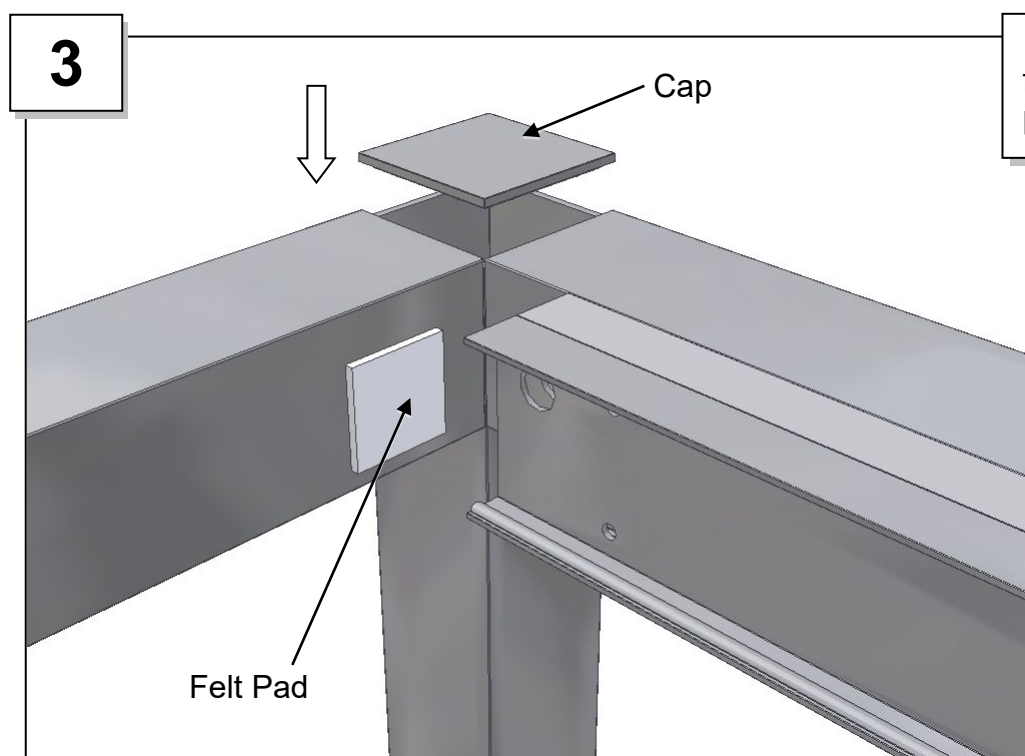


Insert the 8 caps at the ends of each of the 4 legs, glue the felt pads on the lower caps and on the 2 crosspieces in the position shown in figure 3.

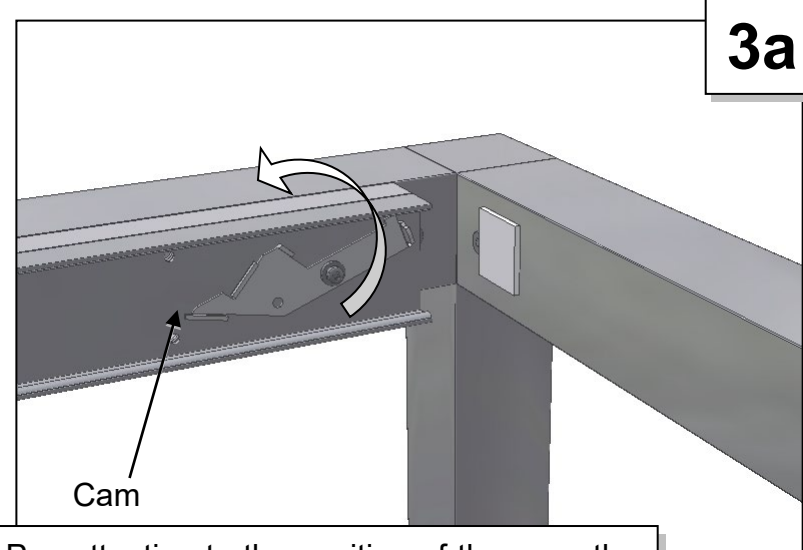

Pay attention to the position of the cam, the correct position is rotated as in figure 3a.

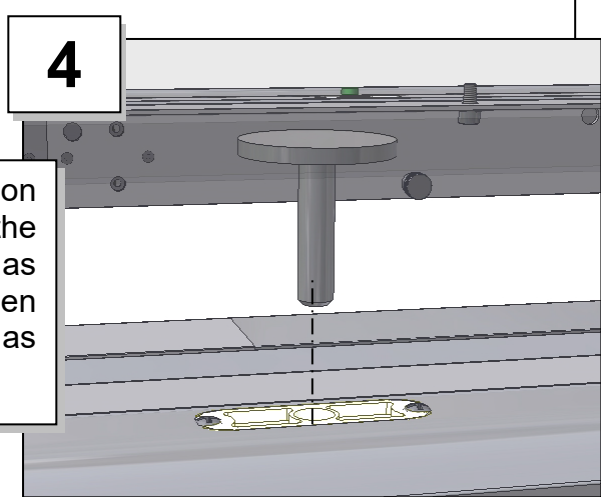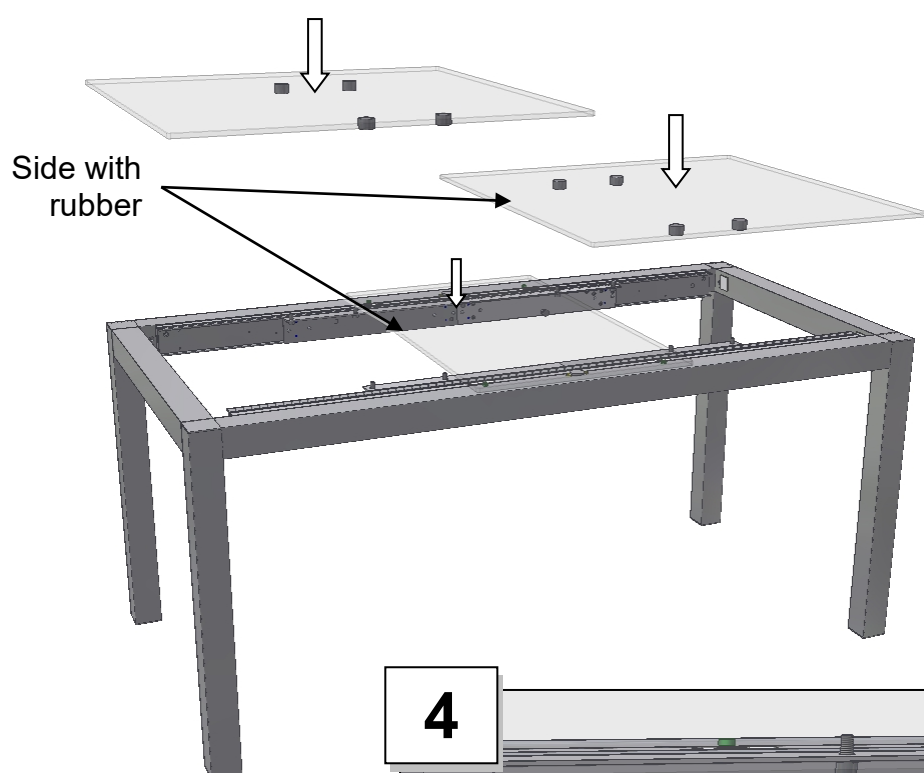

First place the extension by inserting it into the appropriate support as shown in figure 4, then the two half-planes as shown in figure 5.

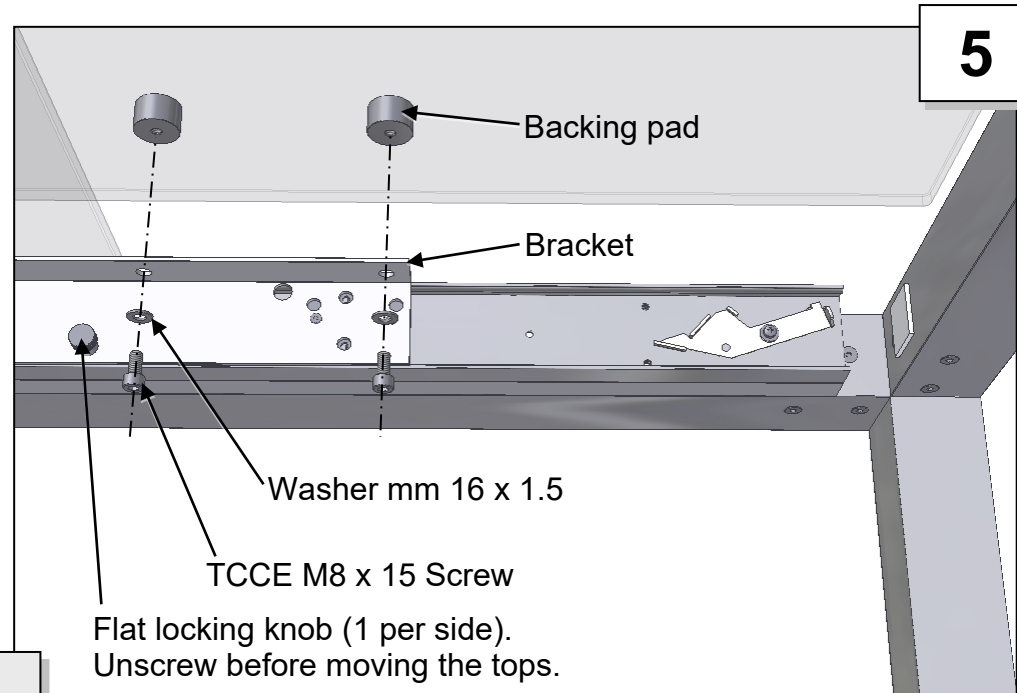

Place the glass half-tops, taking care to align the pads with the respective holes on the brackets. Screw each top with 4 TCCE M8 screws and 4 washers 16 x 1.5 mm.

Opening (1,2) and closing (3,4,5) the table.

